

## SPECIFICATIONS

|                           |                                                                     |
|---------------------------|---------------------------------------------------------------------|
| Normal Operating Voltage: | 15-32 VDC                                                           |
| Stand-By Current:         | 450µA (not isolating)                                               |
| Maximum Current Draw:     | 17mA (device in isolation)                                          |
| Temperature Range:        | 32°F to 120°F (0°C to 49°C)                                         |
| Humidity:                 | 10% to 93% Non-condensing                                           |
| Dimensions:               | 4 1/2" H × 4" W × 1/4" D (Mounts to a 4" square by 2 1/8" deep box) |

This information is included as a quick reference installation guide. Refer to the appropriate Notifier Installation Manual for detailed system information. If the modules will be installed in an existing operational system, inform the operator and local authority that the system will be temporarily out of service. Disconnect power to the control panel before installing the modules.

NOTICE: This manual should be left with the owner/user of this equipment.

## GENERAL DESCRIPTION

ISO-X FAULT ISOLATOR MODULES enable part of the communications loop to continue operating when a short circuit occurs on it. An LED indicator blinks in the normal condition and turns on during a short circuit condition. The module will automatically restore the entire communications loop to the normal condition when the short circuit is removed.

## COMPATIBILITY REQUIREMENTS

To ensure proper operation, these modules shall be connected to addressable, compatible Notifier control panels only.

NOTE: The number of devices that may be installed modules will vary based on the types of devices fire alarm control panel manufacturer for the individual devices.

## MOUNTING

ISO-X modules mount directly to a 4 inch square must have a minimum depth of 2 1/8 inches.

## WIRING

NOTE: All wiring must conform to applicable local regulations.

1. Install module wiring in accordance with wiring diagrams in Figure 1.
2. Secure module to electrical box (supplied by installer).
3. Terminal wire gage: 12-18 AWG

**FIGURE 1. FAULT ISOLATOR MODULE WIRING:**

